
## BMV RF CONNECTIONS

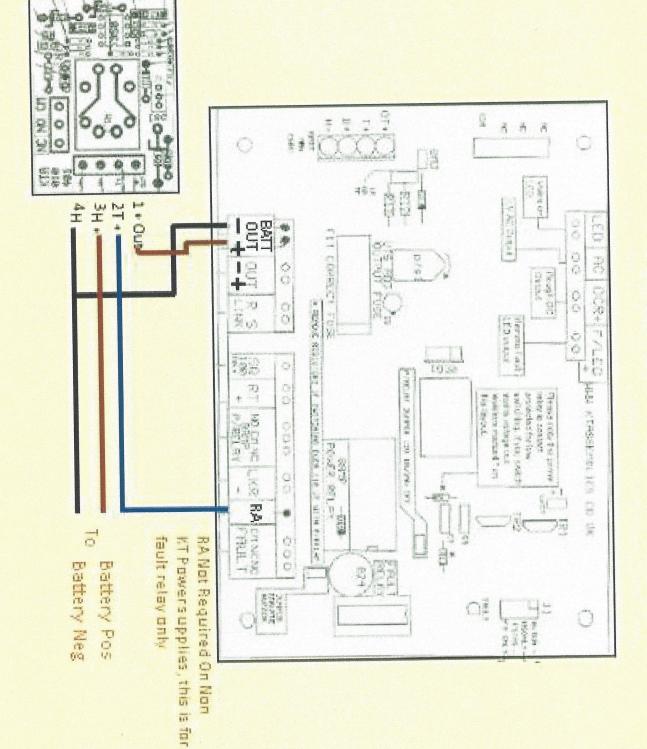







SKECOMA

RS

PSU). WHEN THE RELAY CHANGES IT DISCONNECTS RECONNECTED WHEN THE MAINS IS RESTORED RELAY CONDITION CHANGES WHEN THE BATTERY VOLTAGE DROPS TO 10.5 VOLTS (22.5 FOR 24 VOLT THE PCB IS ENERGISED RELAY STATE AND THE THE BATTERY FROM THE PSU LOAD. THE BATTERY IS

W (50)

MANUAL RESET:

NORMALLY CLOSED SWITCH. WHEN MAINS IS RESTORED OPENING THE SWITCH WILL RECONNECT THE BATTERY THE TWO PINS MARKED RS CAN BE USED FOR MANUAL RESET, WHEN CONNECTED TO A

WHEN FITTING FOR THE FIRST TIME THE BATTERY CHARGE VOLTAGE MAY NEED